 



Disconnect mains supply before installing, servicing or maintaining the luminaire. Open the cover by releasing the three clasps.




Release the screw holding the gear tray in place



 Choose terminal cable entry point (A/B/C). Drill hole through base. Add weatherproof gland to hole. Feed cable through cable entry point




Fix to surface with suitable screws. Optional masonry anchors/raw plugs are supplied

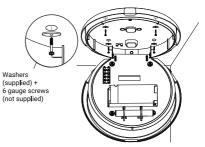


WIRING

 Terminate the cables into the terminal block ensuring the correct polarity is observed. Ensure all conductors are fully sleeved and insulated.



Notes:

 \cdot L' wiring is optional, see Standalone configuration table on next page \cdot DA (DALI) wiring is optional, only required when using a DALI control system

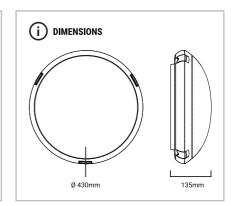



PROGRAMMING & DEFAULT STANDALONE CONFIGURATION

 
L' (optional)

Controls LED output, when L' is active the LED is on, when L' is off the LED is off.

Standalone mode is automatically disabled after addressing either the ECD / ECG short address via DALI or setting the ECD operating mode to 0.

BATTERY LIFE

To maintain the economic life of this product it is required that the battery be discharged and recharged at least once every 6 months. The battery life can be reduced if the battery is not discharged as per the requirements of AS/NZS 2293 or an equivalent standard. Increasing the number of duration tests above that as defined in AS/NZS 2293 or an equivalent standard can have a positive effect on the battery performance as long as 12 discharge cycles per year is not exceeded. The recharging device will operate normally after removal of short circuit fault.



REPLACING THE BATTERY

Access the battery by removing the gear tray. Disconnect and remove battery. Replace battery as was previously installed. Battery can be connected in one direction only, do not force. Allow a minimum 24 hours charging time before carrying out any discharge tests as per the requirements in AS/NZS 2293.

♠ WARNING

The Ektor Pearl is connected to an unswitched active during normal operating conditions. When disconnected from the mains supply, the Pearl is powered by a LiFePO4 battery operated inverter. Due to this, care should be taken when replacing the battery.

SPACING TABLE (DISTANCE BETWEEN FITTINGS)																	
Lx	Classification	Mounting Height (m)															
LA		2.1	2.4	2.7	3.0	3.3	3.6	4.0	4.5	5.0	6.0	7.0	8.0	9.0	10	15	20
0.2	D32	11.5	13.2	14.8	16.5	17.6	18.0	18.5	19.0	19.5	20.1	20.5	20.7	20.6	20.3	0.04	N/A





SPECIFICATIONS

Pearl Circular IP65 Professional Emergency Luminaire - SER II

 Voltage
 220-240 V∼

 Frequency
 50/60 Hz

 Ambient temp.
 0-40°C

 Class
 1

 Control system
 DALI-2

Em. lamp power 2.7 W **Classification** C0:D3 **Rated duration** 90 / 1

Battery spec

Operation

C0:D32 90 / 120 min 6.4 V 1500mAh Maintained Battery type IP rating Mounting type

IP65 Surface Mount Terminal block

LiFePO,

STATUS CHARGE LEDS (GREEN)

Indicator	Description					
Illuminated	Device is in normal mode					
OFF	Battery failure					
Slow flash	Test switch button has been pressed/held for any amount of time, and is not in any self tests					
1x flash	A duration test is pending, the device is not in any self test but set to normal mode					
2x flash	Lamp failure					
4x flash	Interface failure					
5x flash	No DALI address					
7x flash	Device performing function test. The test was triggered by a DALI command or function test interval					

STATUS LEDS (YELLOW)							
Indicator	Description						
Illuminated	Indicates that the device is in normal mode						
0.5sec ON 0.5sec OFF	Last duration test failed, failed to meet duration. The device is not currently running a new test. Mains is on						
2sec ON 2sec OFF	Device is performing a duration test						
4sec ON 1sec OFF	Last duration test passed, the duration was met when last run. Test ran less than 30 days ago						

\wedge

SAFETY WARNINGS

Wiring

- 1. This product must only be installed by a suitably qualified person.
- 2. Before commencing installation turn off and isolate the electrical supply.
- 3. Supply voltages within product. Isolate supply voltages before opening or servicing.
- 4. There are no user serviceable parts.Do not attempt to service other parts as this will void the warranty
- As the installer, it is your responsibility to ensure you comply to all relevant building and safety codes. Refer to application standards for the relevant rules.
- 6. When the ac power is cut or when pressing the test button, the luminaire will operate in emergency mode.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- 8. Do not insulation test over 500vdc.
- 9. The rechargeable device will operate normally after the removal of short circuit fault.
- 10. The luminaire is connected to an unswitched active during normal operating conditions. When disconnected from the mains supply, the luminaire is powered by a LiFePO4 battery operated inverter. Due to this, care should be taken when replacing the battery.
- 11. DALI is not SELV and as such should be treated as LV.



ORDERING INFORMATION						
SKU	Product code	Product number	Description			
11961	EV-PEARL-PRO-IP65	9336462119617	Pearl Circular IP65 Professional Luminaire - SER II			
11962	EV-PEARL-PRO-IP65-S	9336462119624	Pearl Circular IP65 Professional Luminaire with Sensor - SER II			
11963	EV-PEARL-PRO-IP65-EM	9336462119631	Pearl Circular IP65 Professional Emergency Luminaire - SER II			
11964	EV-PEARL-PRO-IP65-EM-S	9336462119648	Pearl Circular IP65 Professional Emergency Luminaire with Sensor - SER II			

WARRANTY STATEMENT

Ektor products are distributed in Australia and New Zealand by Evolt Pty Ltd (Evolt). The Australian Consumer Law as well as other Australian laws guarantee certain conditions, warranties and undertakings, and give you other legal rights, in relation to the quality and fitness for purpose of Ektor products sold in Australia. In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. What constitutes a major failure is set out in the Australian Consumer Law. Nothing in this Warranty purports to modify or exclude the conditions, warranties and undertakings, and other legal rights, under the Australian Competition and Consumer Act and other Australian laws. Ektor products are warranted in Australia for a period of 3 years from the date of delivery of the product, provided that the products are properly stored, installed, used and maintained in accordance with the instructions contained within their manual. Products that have been altered in any way or used other than in accordance with their instructions are not covered by this warranty.

This warranty is not transferable and is valid only in the hands of the purchaser of the product. The warranty does not cover Ektor products other than those purchased from Evolt. Proof of purchase must be provided to Evolt with any warranty claim. Evolt recommends that the purchaser attaches their proof of purchase to their product manual. Evolt's total liability under this warranty is limited to the cost of repair or replacement of the faulty product. Evolt may satisfy its obligations under this warranty in full by repair or replacement of a faulty product. This warranty does not apply to consumable items such as lamps or batteries or other items that can be classified as consumable. For the avoidance of any doubt, any and all warranties or conditions which are not guaranteed under the Australian Competition and Consumer Act or the Australian Competition and Consumer Regulations 2010 and which are not expressly included in this Warranty as additional warranties or conditions are excluded. This Warranty does not cover loss or damage caused by wear and tear, misuse, incorrect installation or operation, failure to clean and maintain, incorrect voltage or non-authorised electrical connections, adverse external conditions (such as power surges and dips, acts of God, exposure to heat, corrosion, insect or vermin infestation), use of non-authorised or defective parts or globes, or to items that have been repaired other than by Evolt or a repairer approved by Evolt.

TECHNICAL SUPPORT AND TROUBLESHOOTING

For further assistance in using this product, consult your nearest wholesaler or Evolt Pty Limited

Last Updated: 10 October 2021_V1.0

evolt